



ICOA[®] PRO FIRMWARE 1.0.5

PIN LOCK FEATURE

LDICOA12APRO(W); LDICOA15APRO(W); LDICOASUB21APRO;

TABLE OF CONTENTS

1	FIRMWARE UPDATE	4
1.1	About the PIN Lock Feature	4
2	BYPASSING THE PIN LOCK UPON START UP OF THE DEVICE	5
3	DEVICE PIN LOCK	6
3.1	Setting the PIN on the Device	6
3.2	Locking the Device	8
3.3	Unlocking the Device	9
4	MOBILE APP PIN LOCK	11
4.1	Setting the PIN via the Mobile App	11
4.2	Unlocking the Device via the Mobile App	12
4.3	PIN Lock on Multiple Devices	12

1 FIRMWARE UPDATE

For detailed instructions on how to update the firmware, see **Updating the Firmware** in the complete user manual.

1.1 ABOUT THE PIN LOCK FEATURE

With the firmware update, the system can be secured with a 3-digit **PIN**. The **PIN Lock** feature is designed to protect the device from accidental or deliberate access. The **PIN Lock** feature can be bypassed after restarting the device, meaning that it is not possible to permanently lock the system securely. Upon activation, the **PIN Lock** feature stays active until you switch it off again.

2 BYPASSING THE PIN LOCK UPON START UP OF THE DEVICE

✓ You have set a **PIN** on the device.

✓ The device is locked.

1 Turn off the device.

2 Turn the device back on.

3 Go the **SETTINGS** menu:

a) Either set a new **PIN** or turn the **PIN Lock** off.



The system locks after 10 seconds of inactivity.

See also:

Setting the PIN on the Device [} 6]


3 DEVICE PIN LOCK

3.1 SETTING THE PIN ON THE DEVICE


✓ You updated your device to firmware version 1.0.5 or higher.




After the firmware update, the **PIN Lock** is inactive.

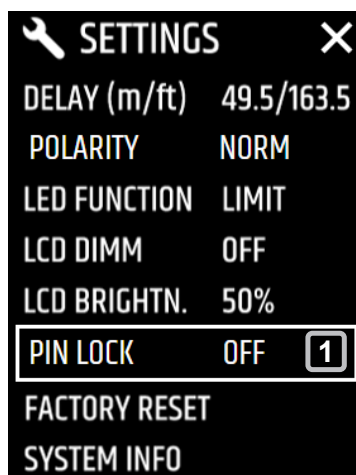


- 1 In the main screen, press and hold the **rotary-push encoder (RPE)** for 2 seconds to enter the **SETTINGS** menu.
- 2 In the **SETTINGS** menu, turn the **RPE**, until **PIN LOCK OFF** **1** is highlighted.

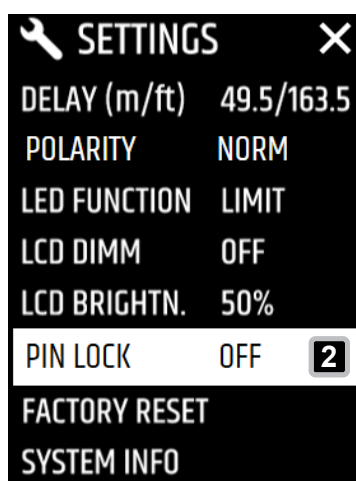


- 3 Press the **RPE** to select **PIN LOCK OFF** **2**.

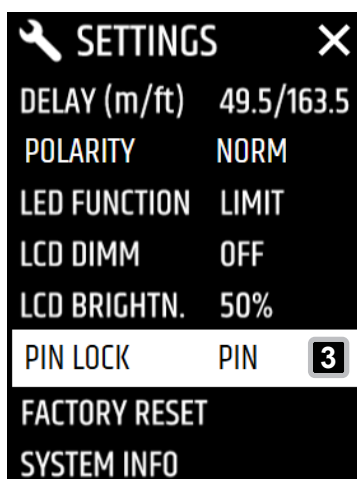

4 Turn the **RPE** to select **PIN LOCK PIN** **3**.

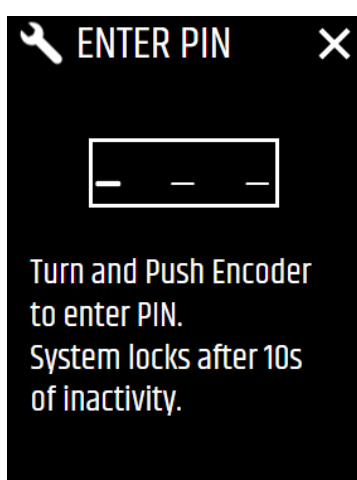


5 Press the **RPE** to open the **ENTER PIN** window.

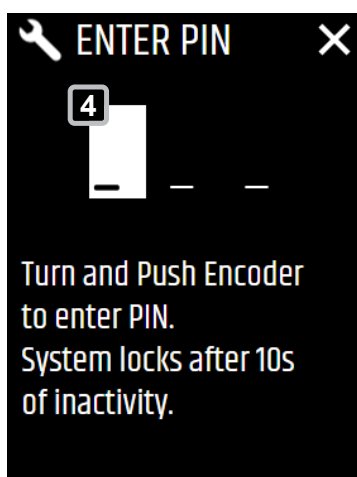

6 Press the **RPE** to access the input field **4**.



The system locks after 10 seconds of inactivity.

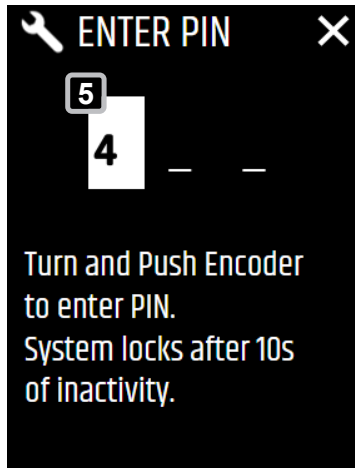

- 7 Select a digit **5** and press the **RPE** to confirm.
- 8 Repeat the previous step for each digit. After the 3rd digit, you automatically leave the **ENTER PIN** window.
⇒ The **PIN** is set.

3.2 LOCKING THE DEVICE

✓ You have set the **PIN** either on the device or via the app.

- 1 After 10 seconds of inactivity, the device locks automatically and jumps back to the main screen.

See also:


Setting the PIN on the Device [} 6]

Setting the PIN via the Mobile App [} 11]


3.3

UNLOCKING THE DEVICE


- ✓ You have set the **PIN** either on the device or via the app.
- ✓ The device is locked.

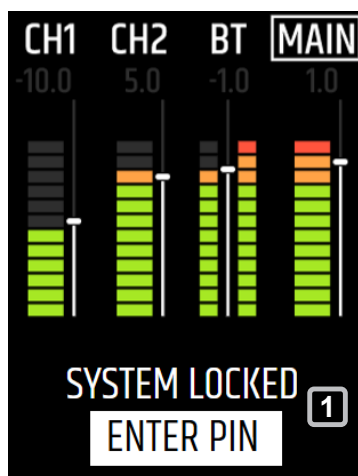

- 1 In the main screen, press or turn the **rotary-push encoder (RPE)** until **SYSTEM LOCKED ENTER PIN 1** appears.

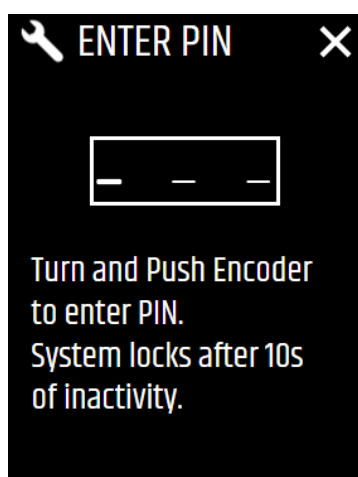


- 2 Press the **RPE** to enter the **ENTER PIN** window.

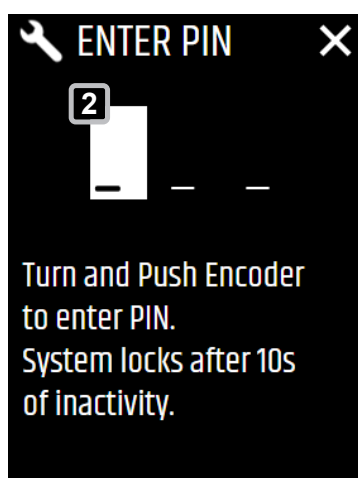

- 3 Press the **RPE** to access the input field **2**.

 The system locks after 10 seconds of inactivity.

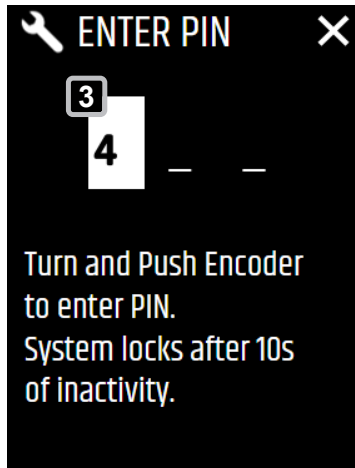

- 4 Select a digit **3** and press the **RPE** to confirm.
- 5 Repeat the previous step for each digit. After the 3rd digit, you automatically leave the **ENTER PIN** window.



If you enter the **PIN** incorrectly, it highlights

red. **4 8 1**

You may reenter the **PIN** after 2 seconds.

⇒ The device is unlocked.

See also:

Setting the PIN on the Device [] 6]

Setting the PIN via the Mobile App [] 11]

4 MOBILE APP PIN LOCK

4.1 SETTING THE PIN VIA THE MOBILE APP


✓ You updated your device to firmware version 1.0.5 or higher.




After you have set a **PIN**, the device is locked.



After the firmware update, the **PIN Lock** is inactive.

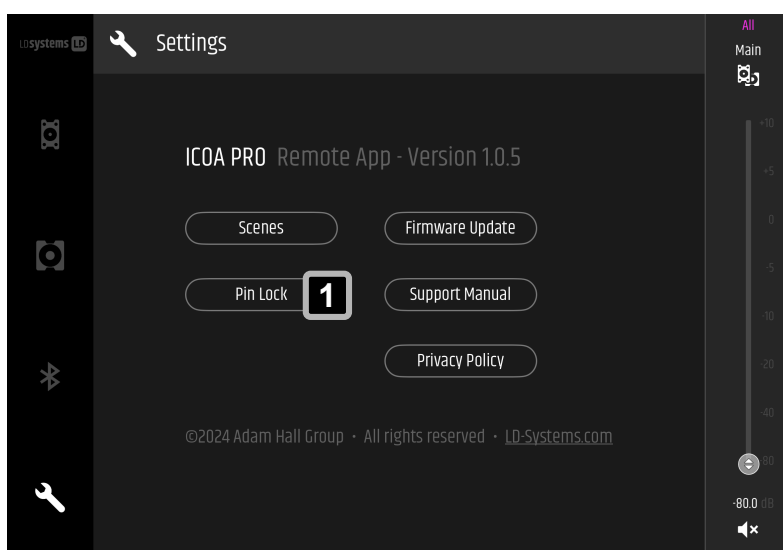

1 In the **SETTINGS** menu of the mobile app, tap **Pin Lock** **1** to open the **ENTER PIN** window.

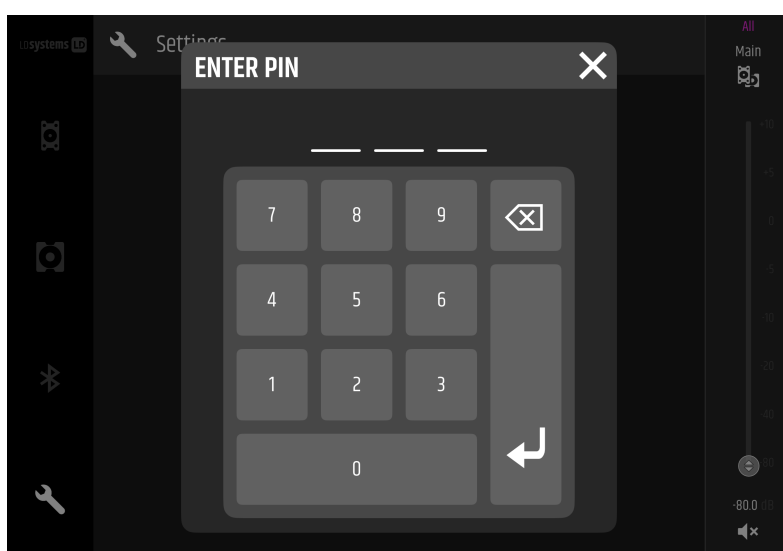

2 In the **ENTER PIN** window, set a 3-digit **PIN**.


3 Press

⇒ You have set a **PIN**.

⇒ The device is locked.

4.2 UNLOCKING THE DEVICE VIA THE MOBILE APP

- ✓ You have set a **PIN**.
- ✓ The device is locked.

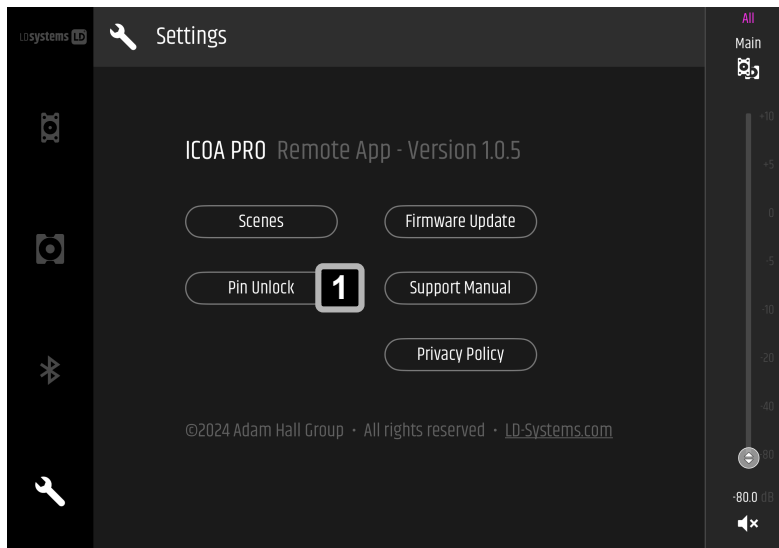

- 1 In the **SETTINGS** menu of the mobile app, tap **Pin Unlock** **1**.
- ⇒ The device is unlocked.

See also:

Setting the PIN on the Device [] 6]

Setting the PIN via the Mobile App [] 11]

4.3 PIN LOCK ON MULTIPLE DEVICES

If you set a **PIN** in the mobile app while you have linked at least 2 devices, the mobile app deploys the **PIN** to all connected devices. The **PIN** set via the mobile app overwrites all previously set **PIN**. If you unlock the **PIN**, all linked devices are unlocked.



If you lock the device via the mobile app, the mobile app lock always takes priority over the device lock.



After an event or when storing the equipment, we recommend deactivating the **PIN Lock**.

