



# MAILA<sup>®</sup> COL P

4 × 6.5" PASSIVE COLUMN SPEAKER

LDMAILACOLP(W);



---

## TABLE OF CONTENTS

|          |                                                        |           |
|----------|--------------------------------------------------------|-----------|
| <b>1</b> | <b>DOCUMENT VERSION AND REVISIONS .....</b>            | <b>5</b>  |
| <b>2</b> | <b>INTRODUCTION .....</b>                              | <b>6</b>  |
| 2.1      | You Made the Right Choice! .....                       | 6         |
| 2.2      | Contacts.....                                          | 6         |
| 2.3      | Link to the Download Centre.....                       | 6         |
| 2.4      | Visualisation Conventions in This User Manual.....     | 7         |
| <b>3</b> | <b>PRODUCT COMPLIANCE .....</b>                        | <b>8</b>  |
| 3.1      | Manufacturer's Declaration.....                        | 8         |
| 3.2      | Declaration of Conformity .....                        | 8         |
| <b>4</b> | <b>SAFETY INSTRUCTIONS.....</b>                        | <b>9</b>  |
| 4.1      | Intended Use .....                                     | 9         |
| 4.2      | Explanation of Safety and Warning Symbols.....         | 9         |
| 4.3      | Structure of Warning Messages.....                     | 10        |
| 4.4      | General Safety .....                                   | 10        |
| 4.5      | Physical Safety .....                                  | 11        |
| <b>5</b> | <b>PRODUCT DESCRIPTION .....</b>                       | <b>12</b> |
| 5.1      | Product Overview .....                                 | 12        |
| 5.2      | Product Variants.....                                  | 12        |
| 5.3      | Optional Accessories.....                              | 12        |
| 5.4      | Technical Data .....                                   | 13        |
| 5.5      | Connection Panel.....                                  | 14        |
| 5.6      | Identification LED .....                               | 15        |
| <b>6</b> | <b>PREPARATION .....</b>                               | <b>16</b> |
| 6.1      | Scope of Delivery .....                                | 16        |
| <b>7</b> | <b>INSTALLATION.....</b>                               | <b>17</b> |
| 7.1      | Attaching the MAILA COL (P) to a MAILA Subwoofer ..... | 17        |
| 7.2      | Attaching the MAILA EasyMount+® .....                  | 18        |
| 7.3      | Detaching the MAILA EasyMount+® .....                  | 20        |

---

|           |                                                              |           |
|-----------|--------------------------------------------------------------|-----------|
| <b>8</b>  | <b>OPERATION .....</b>                                       | <b>21</b> |
| 8.1       | Power Amplification .....                                    | 21        |
| 8.1.1     | Compatible Amplifiers.....                                   | 21        |
| 8.1.2     | Configuration via ArmoniaPlus (A+) by Powersoft.....         | 21        |
| 8.1.2.1   | Downloading ArmoniaPlus (A+) by Powersoft.....               | 21        |
| 8.1.2.2   | Downloading Amplifier Models and Loudspeaker Presets.....    | 21        |
| 8.1.2.3   | ArmoniaPlus Presets MAILA COL P + SAT (X) .....              | 22        |
| 8.2       | Loudspeaker Setups .....                                     | 23        |
| 8.2.1     | Maximum Ground Stacking Configurations.....                  | 23        |
| 8.2.1.1   | Maximum Configuration - MAILA SUB 15 P with MAILA COL P..... | 23        |
| 8.2.1.2   | Maximum Configuration - MAILA SUB P with MAILA COL P.....    | 24        |
| 8.2.2     | Stereo Setup with MAILA COL P and MAILA SAT (X) .....        | 24        |
| <b>9</b>  | <b>MAINTENANCE .....</b>                                     | <b>25</b> |
| 9.1       | Product Maintenance .....                                    | 25        |
| 9.2       | Storing the Device.....                                      | 25        |
| <b>10</b> | <b>DISPOSAL .....</b>                                        | <b>26</b> |
| 10.1      | Packaging Disposal.....                                      | 26        |
| 10.2      | Device Disposal.....                                         | 26        |
|           | <b>INDEX .....</b>                                           | <b>27</b> |

# 1 DOCUMENT VERSION AND REVISIONS

| Version | Date    | Implemented changes |
|---------|---------|---------------------|
| V1.0    | 03/2026 | Original version    |

## 2 INTRODUCTION

### 2.1 YOU MADE THE RIGHT CHOICE!

This product has been developed and manufactured to the highest quality standards to ensure many years of problem-free operation. Find further information about LD Systems on our website:  
<https://www.ld-systems.com/>

### 2.2 CONTACTS

|                    | Adam Hall GmbH Headquarter                             | Customer Service                                       |
|--------------------|--------------------------------------------------------|--------------------------------------------------------|
| E-mail             | info@adamhall.com                                      | customerservice@adamhall.com                           |
| Phone              | +49 6081 9419-0                                        | +49 6081 941973-0                                      |
| Street             | Adam-Hall-Str. 1                                       | Adam-Hall-Str. 1                                       |
| Postal code / city | 61267 Neu-Anspach                                      | 61267 Neu-Anspach                                      |
| Website            | <a href="http://www.adamhall.com">www.adamhall.com</a> | <a href="http://www.adamhall.com">www.adamhall.com</a> |

### 2.3 LINK TO THE DOWNLOAD CENTRE

You can download some information, such as CAD data or technical data, from the Download Centre. Scan the QR code or click the link to download this information:



MAILA COL P



MAILA COL P W

## 2.4 VISUALISATION CONVENTIONS IN THIS USER MANUAL

In this manual we use graphical symbols and icons in certain contexts. Find below a table with explanations and use cases of the graphical symbols and icons.

| Icon / Symbol                                                  | Designation                               | Context                           | Explanation / Example                                                                                              |
|----------------------------------------------------------------|-------------------------------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------------|
| ✓                                                              | <b>Prerequisite</b>                       | Tasks                             | Used in task topics to indicate a prerequisite that must be met before beginning the task.                         |
| ⇒                                                              | <b>Result / Intermediate Result</b>       | Tasks                             | Used in task topics to indicate a result or intermediate result of an action step.                                 |
| <b>1</b> Step<br><b>a)</b> Substep                             | <b>1 Action Step</b><br><b>a) Substep</b> | Tasks                             | Used in task topics to indicate action steps and substeps.                                                         |
| <b>1</b>                                                       | <b>Callout</b>                            | Graphics; tasks                   | Text-image reference or labeling of certain functions on the device                                                |
| [...]                                                          | <b>Value range indicator</b>              | Technical data; paragraphs; lists | Indicates the range of a value, such as "Compressor ratio: <b>1:1...20:1</b> ". Mostly used in tables or callouts. |
| *                                                              | <b>Asterisk</b>                           | Paragraphs; tables                | Indicates additional information in a footnote.                                                                    |
| The <b>LIM</b> LED lights up                                   | <b>General User Interface element</b>     | Paragraphs; tasks; tables; lists  | The words presented in this way represent graphic user interface elements on the device.                           |
| <b>PAGE</b> button                                             | <b>Key / Button</b>                       | Paragraphs; tasks; tables; lists  | The words presented in this way represent user interface controls on the device.                                   |
| <name>                                                         | <b>User input</b>                         | Paragraphs; tasks; tables; lists  | The words presented in this way represent required user inputs.                                                    |
| <u><a href="https://adamhall.com">https://adamhall.com</a></u> | <b>Weblink</b>                            | Paragraphs; tables; lists         | External link to a website                                                                                         |

## 3 PRODUCT COMPLIANCE

### 3.1 MANUFACTURER'S DECLARATION

Adam Hall offers a voluntary, EU-wide manufacturer's guarantee of 2 years. The statutory warranty period is not affected by this voluntary guarantee.

Visit the Adam Hall Service Portal to access the **Download Centre**:

<https://portal.adamhall.com/>

Under the **Service & Regulations** section, you find our current detailed manufacturer's declarations, warranty conditions, and limitation of liability.

To request warranty for a product, please contact:

Adam Hall GmbH, Adam-Hall-Str. 1, 61267 Neu-Anspach

customerservice@adamhall.com

0049 (0)6081 / 9419-1000

### 3.2 DECLARATION OF CONFORMITY

UK  
CA

Hereby, Adam Hall Ltd. declares that this product meets the following guidelines (where applicable)

- Electrical Equipment (Safety) Regulations 2016
- Electromagnetic Compatibility Regulations 2016 (SI 2016/1091)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulation 2012 (SI 2012/3032)
- Radio Equipment Regulations 2017 (SI 2016/2015)

Products that are subject to Electrical Equipment(Safety)Regulation 2016, EMC Regulation 2016 or RoHS Regulation can be requested at [info@adamhall.com](mailto:info@adamhall.com). Products that are subject to the Radio Equipments Regulations 2017 (SI2017/1206) can be downloaded at <http://www.adamhall.com/compliance>.

#### FCC STATEMENT



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**⚠ CAUTION! RF Exposure Information: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.**

**⚠ CAUTION! Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.**

## 4 SAFETY INSTRUCTIONS

### 4.1 INTENDED USE

The **MAILA COL P** is a 4 × 6.5" passive column loudspeaker, intended as sound reinforcement.

This product has been developed for the professional use in the field of event technology. Furthermore it is intended for qualified users with specialist knowledge of event technology only.

The device is intended for both mobile applications and fixed installations.

The device is intended for indoor use only.

It is not suitable for domestic use.

Do not use the product outside the operating conditions as stated in the user manual under Technical Data. Liability for damage and third-party damage to persons and property due to inappropriate use is excluded.

This product is not suitable for children and persons with limited physical, sensory, or mental capabilities or lack of experience and knowledge.

### 4.2 EXPLANATION OF SAFETY AND WARNING SYMBOLS

Find the following safety and warning symbols on the device, the user manual, or the packaging:



This symbol indicates that you must read the complete user manual before using the product.



This symbol indicates a general hazardous situation.



This symbol indicates tripping hazards.



This symbol indicates high sound pressure levels.



This symbol indicates pinching hazards.



This symbol indicates that the product is for indoor use only.



This symbol indicates that the product is not suitable for household use.



This symbol indicates helpful hints or additional information.

## 4.3

## STRUCTURE OF WARNING MESSAGES

In this user manual, warning messages are structured with a safety symbol, a signal word, a hazard description, and instructions on how to avoid injuries or death.

**DANGER**

Indicates a hazardous situation which will result in death or serious injury.

**WARNING**

Indicates a hazardous situation which could result in death or serious injury

**CAUTION**

Indicates a hazardous situation which could result in minor or moderate injury.

**NOTICE**

Indicates situations or conditions that could result in damage to property and/or the environment.

## 4.4

## GENERAL SAFETY



- Read this document carefully.



- Keep this document for later reference.



- Follow closely the instructions in this document.
- This document is an integral part of the product. If you sell or pass on the product, you must include this document.
- Only use this product according to its intended use.
- Risk of choking. Keep small parts away from children and individuals with impaired physical, sensory, or mental capabilities.
- Risk of suffocation. Keep plastic bags away from children and individuals with impaired physical, sensory, or mental capabilities.
- Observe all safety instructions and warning messages in this document, on the device, and on the packaging.
- Products are subject to continuous further development. If you find discrepancies between this document and the product labeling, the information on the product always takes priority.
- Do not remove safety instructions or warning messages from the product.
- Do not open the device.
- Do not modify the product.
- If the product shows any sign of damage, do not use it.
- Do not operate the product with removed or missing covers.

- Do not expose the product to direct sunlight.
- If not further specified in the user manual under Technical Data, do not use the product in ambient temperatures that exceed 40 °C / 104 °F or fall below 0 °C / 32 °F
- Do not use the product in tropical climate.
- Do not use the product above 2000 metres of altitude.
- Unless otherwise stated, do not use the product under marine conditions.
- Use only accessories specified by the manufacturer.
- Maintenance and repairs may only be carried out by authorized service personnel.
- Store and transport the product in a dry and safe environment.
- Clean the product on a regular basis. If applicable, see the user manual for maintenance intervals.
- High sound pressure levels may cause hearing damage. Avoid prolonged exposure to high sound pressure levels. Wear hearing protection.
- Risk of hearing damage. Plugging or unplugging devices in the signal chain may cause an audio signal peak. Switch on the loudspeaker as the last device in the signal chain.
- Risk of hearing damage. Switching on or off other devices in the signal chain may cause an audio signal peak. Switch on the loudspeaker as the last device in the signal chain.

## 4.5

### PHYSICAL SAFETY



- Make sure that the device and any accessories are securely positioned. Secure against unintentional movement.



- Check all cable routes to prevent tripping accidents.



- Moving components, such as mounting brackets, pose a risk of pinching injuries.

## 5 PRODUCT DESCRIPTION

### 5.1 PRODUCT OVERVIEW

The **LD Systems MAILA COL P** is a 4 × 6.5" passive column loudspeaker.

#### FEATURES

- 4 × 6.5" Passive column module for extended low-mid headroom
- Power handling: 2,000 W
- Frequency response (-6 dB): 105 ... 500 Hz
- Max. SPL (peak): 130 dB
- Input impedance: 6 Ω
- Flexible use in ground stack and flown setups
- **SmartLink+**® enables cable-free connection to up to eight **MAILA SAT**
- Wink-LED for individual speaker identification
- Rugged, lightweight aluminium cabinet
- Secure, fast mounting via 4 pins + 1 screw
- Two handles for confident handling on site

### 5.2 PRODUCT VARIANTS

The **MAILA® COL** is available in 3 variants:

- **MAILA® COL** - 4 x 6.5" Powered Column Speaker + Power Amplifier for up to eight Satellites
- **MAILA® COL P** - 4 × 6.5" Passive Column Speaker
- **MAILA® COL P W** - 4 × 6.5" Passive Column Speaker, white

### 5.3 OPTIONAL ACCESSORIES

Find various accessories for your product in the Adam Hall Shop:

<https://www.adamhall.com/shop>

| Accessory                                                                                      | Article Number  |
|------------------------------------------------------------------------------------------------|-----------------|
| <b>MAILA EasyMount+</b> ®<br>Truss / shackle bracket for <b>MAILA SPA</b> and <b>MAILA COL</b> | LDMAILATMB      |
| <b>MAILA ARRAY RC M</b><br>Rain cover for <b>MAILA COL</b> + 4 <b>MAILA SAT</b>                | LDMAILAARRAYRCM |

## 5.4 TECHNICAL DATA

### GENERAL

| Parameter                                                  | Value                       |
|------------------------------------------------------------|-----------------------------|
| Article number                                             | LDMAILACOLP(W)              |
| Peak load capacity                                         | 2,000 W                     |
| Peak load capacity (AES)                                   | 1,000 W                     |
| Max. SPL peak (sine burst, fullspace/1 m, THD≤10 %)        | 125.4 dB                    |
| Max. SPL peak (pink noise, fullspace/1 m, CF 4)            | 130 dB                      |
| Max. SPL average (sine burst, BW, halfspace/1 m, THD≤10 %) | 122 dB                      |
| Frequency response (-6 dB, rel. Avg.)                      | 105 Hz ... 500 Hz           |
| Impedance                                                  | 6 Ω                         |
| Number of inputs                                           | 1                           |
| Input connector types                                      | SpeakON female              |
| Number of outputs                                          | 1                           |
| Output connector types                                     | SpeakON female, SmartLink+® |
| Colour LDMAILACOLP                                         | Black                       |
| Colour LDMAILACOLPW                                        | White                       |

### MIDRANGE DRIVER

| Parameter  | Value     |
|------------|-----------|
| Size       | 6.5"      |
| Quantity   | 4         |
| Voice coil | 2"        |
| Magnet     | Neodymium |

### HOUSING

| Parameter         | Value                          |
|-------------------|--------------------------------|
| Design            | Bass reflex                    |
| Number of handles | 2                              |
| Mounting type     | EasyMount+®, MAILA® COL flange |
| Flange            | SmartLink+®                    |
| Cabinet material  | Aluminium                      |
| Coating           | Powder coated                  |

## ENVIRONMENTAL


| Parameter                             | Value          |
|---------------------------------------|----------------|
| Ambient temperature                   | 0 °C ... 40 °C |
| Maximum air humidity (non-condensing) | 80 %           |

## DIMENSIONS AND WEIGHT

| Parameter | Value  |
|-----------|--------|
| Width     | 205 mm |
| Height    | 953 mm |
| Depth     | 355 mm |
| Weight    | 31 kg  |

### 5.5

## CONNECTION PANEL

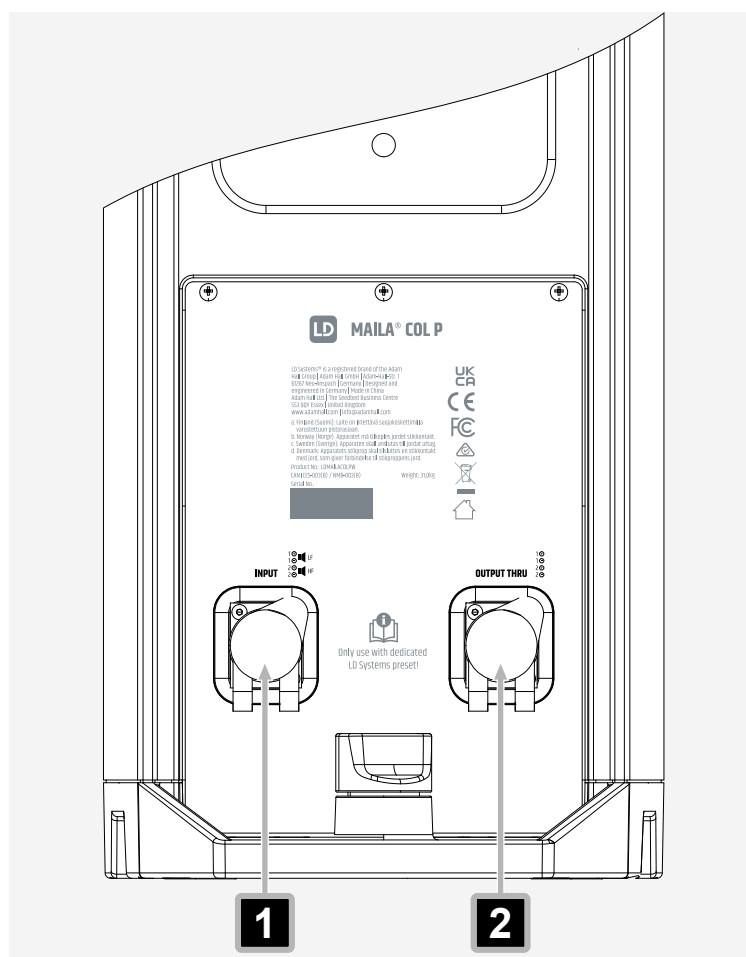

- 1** **INPUT** - 4-pole speakon-compatible input connector. Pins 1+ and 1- drive the **MAILA COL P**.
- 2** **OUTPUT THRU** - 4-pole speakon-compatible output connector. Direct pass-through of all pins connected to the input.

## 5.6

## IDENTIFICATION LED



Activate an LED on the front **1** for easy identification of the device when configuring with a dedicated **LD Systems** preset in **ArmoníaPlus (A+)**.

## 6 PREPARATION

### 6.1 SCOPE OF DELIVERY

- Device
- Mains power cable
- Safety Compliance Information

## 7 INSTALLATION

### 7.1 ATTACHING THE MAILA COL (P) TO A MAILA SUBWOOFER



✓ You have securely placed the **MAILA** subwoofer on a stable and level surface.

- 1 Insert the 4 steel bolts **1** of the **MAILA COL (P)** into the 4 retaining sockets **2** of the **MAILA** subwoofer connecting plate.
- 2 Move the **MAILA COL (P)** as far down as possible.
- 3 Tighten the screw on the back of the **MAILA COL (P)**. **3**

## 7.2

## ATTACHING THE MAILA EASYMOUNT+®




**WARNING**

### Falling object

Risk of serious injury


- Observe all regional safety regulations concerning overhead loads.
- Make sure that the device is securely mounted.
- Make sure that the mounting accessory supports the weight of the device.
- Before any assembly, check that all mounting bracket components are complete, undamaged and work correctly.

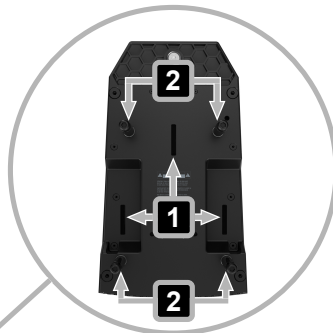

The fixing points for attaching the **MAILA EasyMount+® 1** are located on the bottom of the loudspeaker.




Optionally, the 4 steel bolts of the **MAILA COL (P) 2** can be left in the recesses for attaching the **MAILA EasyMount+®**.

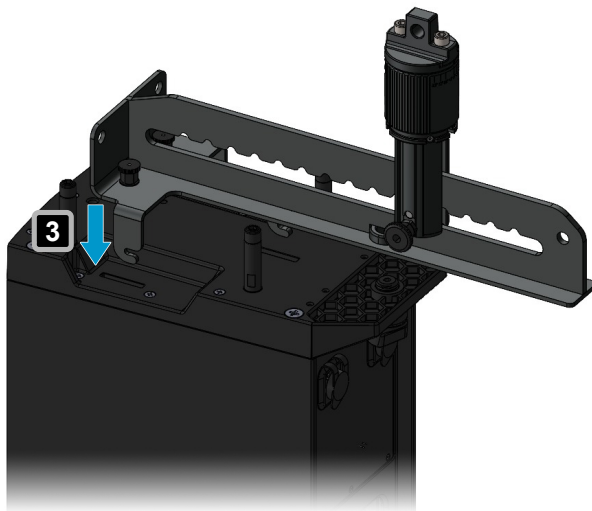


- 1 Insert all 3 steel hooks of the **MAILA EASYMount+®** into the corresponding retaining sockets. **3**

- 2 Slide the **MAILA EASYMount+®** towards the rear of the housing. **4**

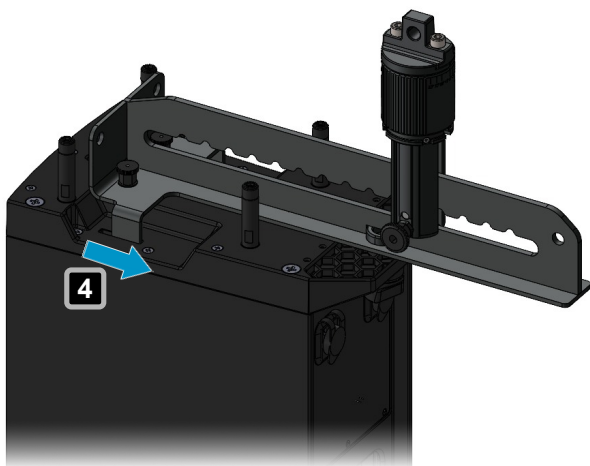


- ! NOTICE!** Make sure that the spring-loaded locking pins **5** engage fully.

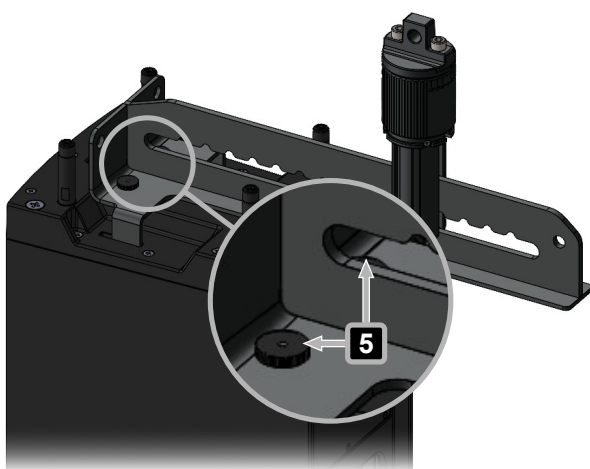


### 7.3


### DETACHING THE MAILA EASYMOUNT+®

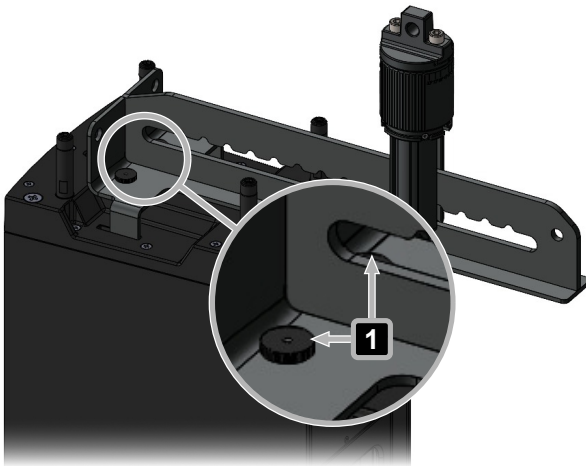

- 1 Pull out both spring-loaded locking pins **1** simultaneously and hold them.

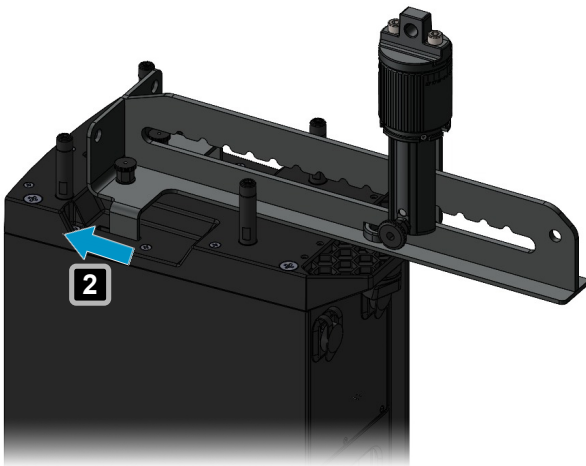

- 2 Slide the **MAILA EASYMount+®** towards the front of the housing. **2**

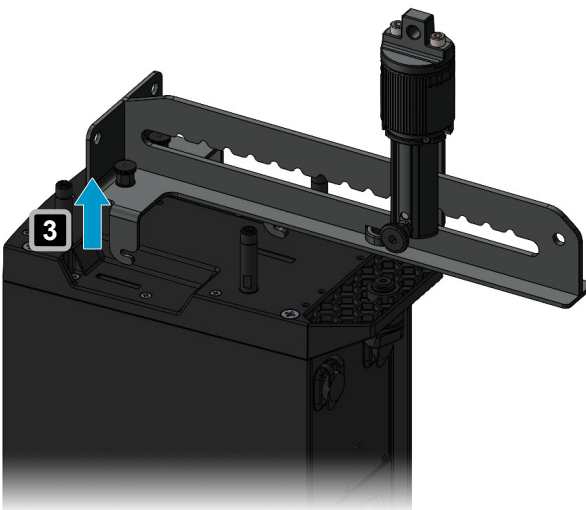

- 3 Lift the **MAILA EASYMount+®** upwards. **3**

## 8 OPERATION

### 8.1 POWER AMPLIFICATION

#### 8.1.1 COMPATIBLE AMPLIFIERS

All components of the **MAILA Passive** series are designed for use with the following amplifiers.

| Amplifier                                                                     | Article Number |
|-------------------------------------------------------------------------------|----------------|
| <b>ADA 8 K4</b><br>4-channel amplifier with DSP & DANTE® - 4 × 2,000 W @ 4 Ω  | LDADA8K4       |
| <b>ADA 12 K4</b><br>4-channel amplifier with DSP & DANTE® - 4 × 2,700 W @ 4 Ω | LDADA12K4      |



The use of amplifiers offered directly by Powersoft is also possible, as long as the specifications of the amplifier and loudspeaker match.

#### 8.1.2 CONFIGURATION VIA ARMONIAPLUS (A+) BY POWERSOFT

##### 8.1.2.1 DOWNLOADING ARMONIAPLUS (A+) BY POWERSOFT



Configure your **MAILA Passive** system via **ArmoniaPlus (A+)** by **Powersoft**. Download **A+** on the manufacturers website.

##### 8.1.2.2 DOWNLOADING AMPLIFIER MODELS AND LOUDSPEAKER PRESETS

In **ArmoniaPlus (A+)** download the corresponding amplifier model in the **Marketplace**.

| Amplifier        | Amplifier Model           |
|------------------|---------------------------|
| <b>ADA 8 K4</b>  | LD Systems ADA 8K4 Model  |
| <b>ADA 12 K4</b> | LD Systems ADA 12K4 Model |

To add **MAILA** loudspeaker models to the **A+** workspace, download the **LD Systems Speaker's Presets** in the **Marketplace**.

**8.1.2.3 ARMONIAPLUS PRESETS MAILA COL P + SAT (X)**

The following presets are available for the **MAILA SUB COL P**.

| Application       | Number of Amp Channels | Channel Naming |
|-------------------|------------------------|----------------|
| 1 x SAT + COL FLY | 2                      | LF<br>HF       |
| 1 x SAT + COL GND | 2                      | LF<br>HF       |
| 2 x SAT + COL FLY | 2                      | LF<br>HF       |
| 2 x SAT + COL GND | 2                      | LF<br>HF       |
| 3 x SAT + COL FLY | 2                      | LF<br>HF       |
| 3 x SAT + COL GND | 2                      | LF<br>HF       |
| 4 x SAT + COL FLY | 2                      | LF<br>HF       |
| 4 x SAT + COL GND | 2                      | LF<br>HF       |
| 5 x SAT + COL FLY | 2                      | LF<br>HF       |
| 5 x SAT + COL GND | 2                      | LF<br>HF       |
| 6 x SAT + COL FLY | 2                      | LF<br>HF       |
| 6 x SAT + COL GND | 2                      | LF<br>HF       |
| 7 x SAT + COL FLY | 2                      | LF<br>HF       |
| 8 x SAT + COL FLY | 2                      | LF<br>HF       |

## 8.2 LOUDSPEAKER SETUPS

### 8.2.1 MAXIMUM GROUND STACKING CONFIGURATIONS

To prevent speaker configurations from tipping over in ground stacking operation, observe the maximum permissible configurations.



The same maximum configurations applies when using multiple subwoofers.

#### 8.2.1.1 MAXIMUM CONFIGURATION - MAILA SUB 15 P WITH MAILA COL P




**WARNING**

##### Tipping object

Risk of serious injury

- a. Observe all regional safety regulations.
- b. Observe the maximum permissible configurations.
- c. Make sure that the device is securely positioned on a level surface.

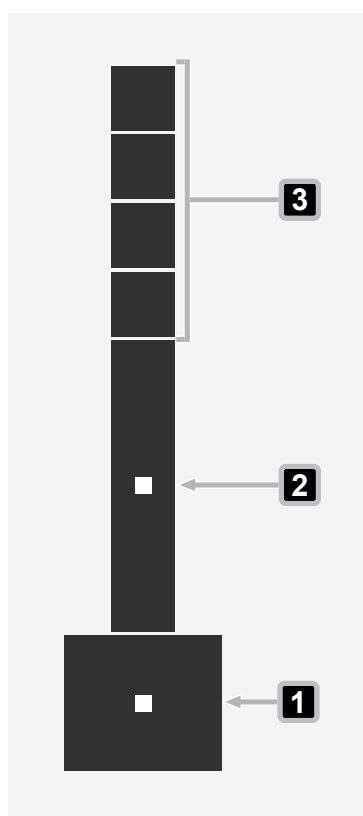


- 1** MAILA SUB 15 P
- 2** MAILA COL P
- 3** Maximum 4 × MAILA SAT (X)

8.2.1.2 MAXIMUM CONFIGURATION - MAILA SUB P WITH MAILA COL P




Tipping object

- Risk of serious injury
- a. Observe all regional safety regulations.
  - b. Observe the maximum permissible configurations.
  - c. Make sure that the device is securely positioned on a level surface.

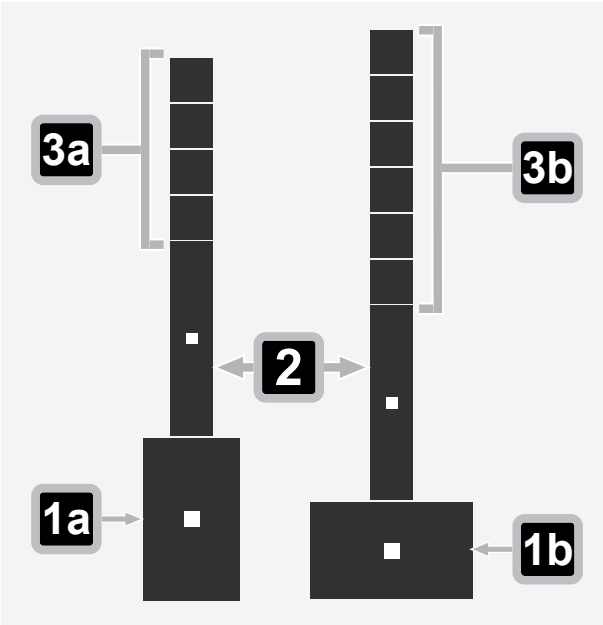

- 1a MAILA SUB P upright
- 1b MAILA SUB P sideways
- 2 MAILA COL P
- 3a Maximum 4 × MAILA SAT (X)
- 3b Maximum 6 × MAILA SAT (X)

8.2.2 STEREO SETUP WITH MAILA COL P AND MAILA SAT (X)

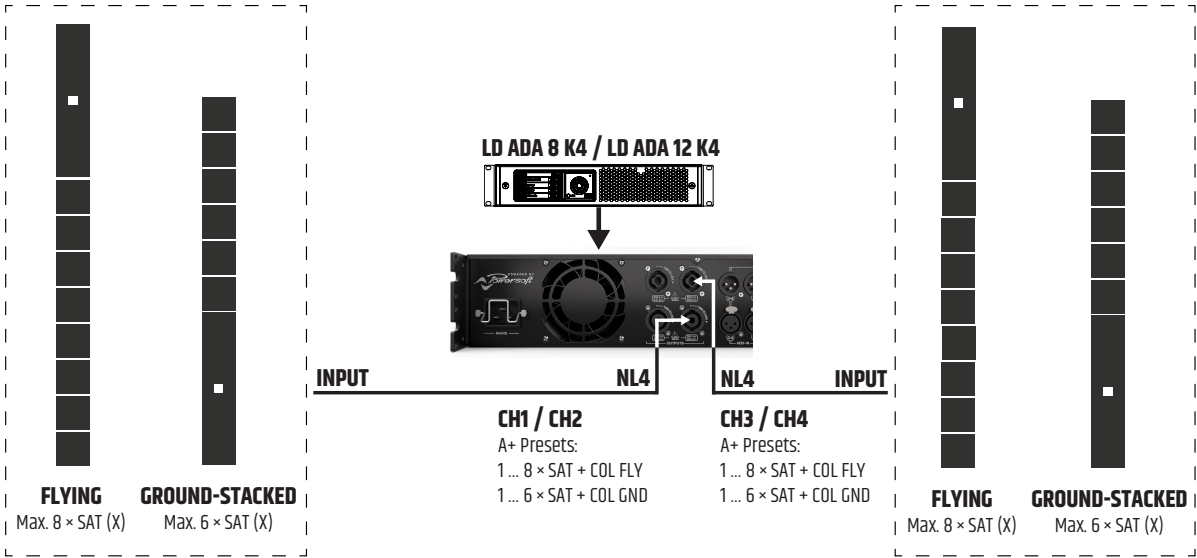

## 9 MAINTENANCE

### 9.1

#### PRODUCT MAINTENANCE



##### NOTICE

##### Damage to the device and void of warranty

- a. Do not use cleaning agents, disinfectants, alcohol, or agents with abrasive effect for cleaning.

Carry out the maintenance measures listed below on a regular basis. The frequency of cleaning depends on the environment in which you use the product. Damp or dirty environments may cause increased soiling and wear.

##### VISUAL INSPECTION

Check the following points before operating the device.

- Check all outside screws and covers for corrosion, damage or excessive wear.
-  **WARNING! Risk of falling objects.** Check that all screws, fasteners, and rigging points are securely tightened.

##### CLEANING

- Clean the surface with a clean and damp lint-free cotton cloth. Wipe off all excess moisture.

### 9.2

#### STORING THE DEVICE

Store the device only in a dry and clean environment. If you are storing the individual components of the device, use special protective covers, bags, and cases. Find such accessories for your product in the Adam Hall Shop (<https://www.adamhall.com/shop>).

## 10 DISPOSAL

### 10.1

#### PACKAGING DISPOSAL



1. You can feed the packaging into the reusable material cycle using the usual disposal methods.
2. Separate the packaging in accordance with the applicable disposal laws and recycling regulations in your country

### 10.2

#### DEVICE DISPOSAL



1. This device is subject to the European Directive on Waste Electrical and Electronic Equipment, as amended. WEEE Directive Waste Electrical and Electronic Equipment. Old appliances do not belong in the household waste. The old device must be disposed of via an approved disposal company or a municipal disposal facility. Observe the applicable regulations in your country.
2. Observe all disposal laws applicable in your country.
3. As a private customer, you can obtain information on environmentally friendly disposal options from the seller of the product or the appropriate regional authorities.
4. Retailers are often legally obliged to take back items free of charge.
5. Old appliances that contain harmful substances are labelled with the symbol of a crossed-out dustbin.
6. Current information on the collection rate can be found at the following website:  
<https://environment.ec.europa.eu/>. Search for the following term: waste-electrical-and-electronic-equipment-weee.

---

## INDEX

### A

|                               |        |
|-------------------------------|--------|
| Accessories                   | 12     |
| Amplifier                     | 21     |
| Amplifier Models              | 21     |
| ArmoniaPlus (A+) by Powersoft | 21, 22 |

### C

|                  |    |
|------------------|----|
| Cleaning         | 25 |
| Configurations   |    |
| Ground Stacking  | 23 |
| Connection panel | 14 |
| Customer Service | 6  |

### D

|          |   |
|----------|---|
| Download | 6 |
|----------|---|

### G

|                 |    |
|-----------------|----|
| Ground stacking | 23 |
|-----------------|----|

### I

|                    |    |
|--------------------|----|
| Identification LED | 15 |
| Input connections  | 14 |

### L

|                    |    |
|--------------------|----|
| Loudspeaker setups | 23 |
|--------------------|----|

### M

|                          |    |
|--------------------------|----|
| Mounting                 |    |
| MAILA loudspeaker column | 17 |

### O

|                      |    |
|----------------------|----|
| Optional accessories | 12 |
| Output connections   | 14 |
| Overview             |    |

|                  |    |
|------------------|----|
| Connection panel | 14 |
| Product          | 12 |

### P

|                  |        |
|------------------|--------|
| Presets          | 21, 22 |
| Product variants | 12     |

### S

|                   |    |
|-------------------|----|
| Scope of delivery | 16 |
| Speakon           | 14 |
| Storing           | 25 |

### T

|                |        |
|----------------|--------|
| Technical data | 13, 14 |
|----------------|--------|

